



OZONE3PROTECTION

The Leader of Inflatable Products

May,2020



01

PRODUCT



❖ Inflatable Disinfection Tunnel



This inflatable disinfection tunnel could make automatic temperature measurement and automatic disinfection.

Name	Inflatable Disinfection Tunnel
Size	3.2*1.7*2.4m
Material	PVC Tarpaulin
Color	Blue and transparent
Packing Size	86*60*53cm
Weight	60KG
Set-up Time	2~3Minutes
Price	8500 RMB/unit (Quantity above 50 units)

Inflatable Disinfection Tunnel



Package



Light



Waterproof



Uvioresistant



Flame retardant



Removable



Quickly build

❖ Inflatable Disinfection Tunnel

1. When people to be detected stand in front of the disinfection tunnel, the sensor senses the person, and the disinfection spray system will start to work.

While there is no moving object in front of it for more than 8 seconds, the spray will stop.



Microwave inductor

2. People entering the tunnel and use automatic temperature measuring device to detect body temperature. People need put their forehead close to the position of the probe of the device, about 10cm from it.



Automatic temperature measuring device

❖ Inflatable Disinfection Tunnel

3. If the body temperature is lower than the setting temperature, the system will report that the body temperature is low or normal, if the body temperature exceeds the set temperature, the system will alarm.



Automatic temperature measuring device

4. After detecting temperature, walk through the disinfection spray tunnel to complete disinfection.

It only needs about 5 seconds to pass the tunnel to finish the whole process, so it can pass more than 10 persons in one minute.



Disinfection spray device

Application

This inflatable disinfection tunnel is easy to set up and only need 2-3 minutes to inflate. It can be widely used in the following scenarios.

Include office building, community, hospital, school, supermarket, shopping mall, scenic spot, station, airport, factory, and other public areas.



Office building



Community



Hospital



School



Shopping mall



Airport




Station



Scenic spot





Inflatable Hospital Tent

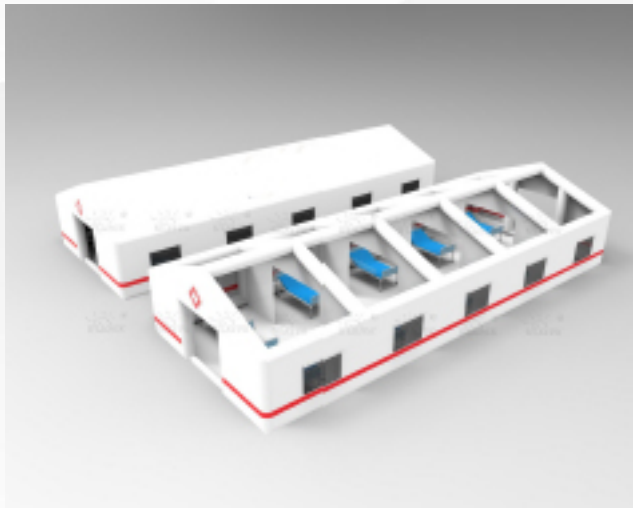


The structural design of the inflatable hospital tent has the durability of a permanent building, but its flexibility and ease of operation provide great portability, low operating cost and minimal maintenance, making the inflatable tent widely used in military, medical, rescue, exhibition, etc

Name	Inflatable Hospital Tent
Size	15*6m or customized
Material	0.9mm PVC Tarpaulin
Color	White、Blue、Orange、Army Green、 etc.
Set-up Time	10~15Minutes
Accessories	Air pump and repair kits
Price	490 RMB/square (Include lights, do not include other device)

Inflatable Hospital Tent

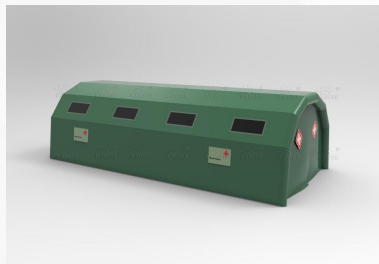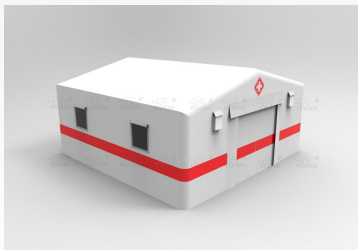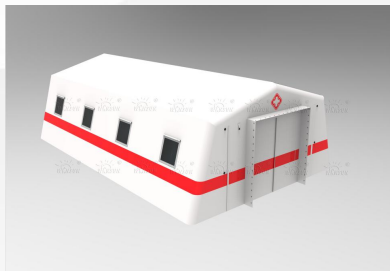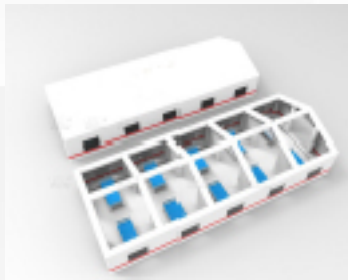

Inflatable Hospital Tent

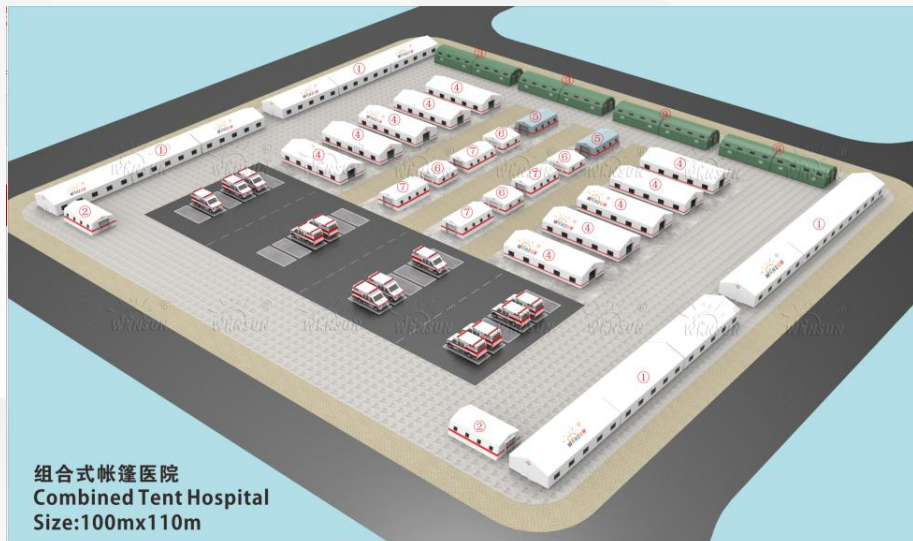

组合式帐篷医院
 Combined Tent Hospital
 Size: 100mx110m

- | | | |
|---|-------|------------------------------|
| ① | 住院区 | Living Quarters |
| ② | 办公接洽区 | Office Contact Area |
| ③ | 仓储区 | Warehouse |
| ④ | 病患区 | Patients Area |
| ⑤ | 病患管理区 | Patient Management Area |
| ⑥ | 护士站 | Nursing Station |
| ⑦ | 诊疗区 | Diagnosis And Treatment Area |



Maritime Rescue

The double-layer structure of the inflatable tent makes it have better insulation and cold-proof effect, suitable for cold sea rescue.



Natural Disaster Rescue

Time is life in natural disaster, and it takes only 3 minutes to build an inflatable tent, which is suitable for natural disaster rescue.



Army Stationed

Inflatable tents can be set up in different groups, adjusted according to their effective available area and structure to meet the clear assignment and function of the group, suitable for military.



Medical Assistance

The inflatable tent is reasonable in structure and can be configured with different functional settings. It is used in medical rescue as a mobile hospital.

◆ Contact Us



Protec Europe C.B.

Address : Pl/De Los Palacios N°42 Monfarracinos (Spain)

Contact : Jon García Aguado

Mobile/whatsapp/wechat : +34 654647828

info@ozone3protection.com

Website : www.ozone3protection.com

www.ozone3protection.com





**Looking forward to cooperation
with you! Thanks!**